
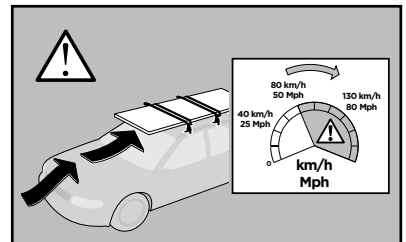
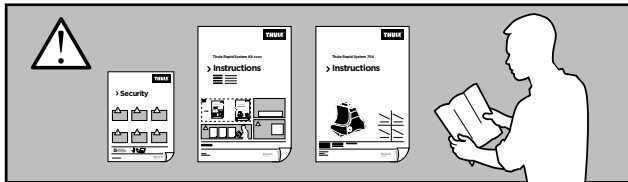
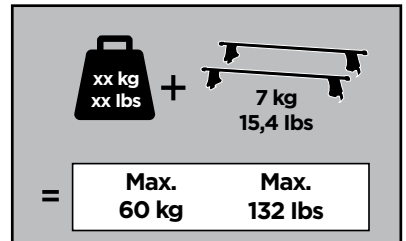


# Thule Rapid System Kit 1441

# > Instructions

**VOLVO C30**, 3-dr Coupé, 07-13 / \*08-13

\*North America

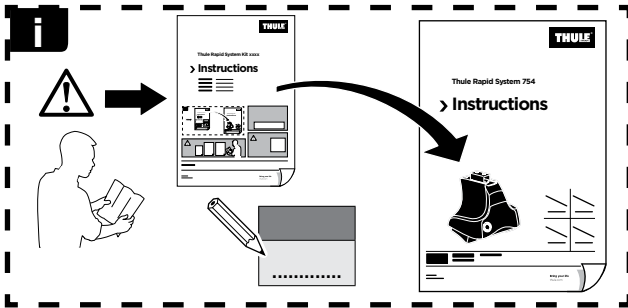


ISO 11154-E

**141441**  
C.20151215  
519-1441-03

**Bring your life**  
thule.com




204 x1



206 x1

273 x1

274 x1




841 x2

842 x1

889 x1





x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>VOLVO C30</b> , 3-dr Coupé, 07-13 / *08-13	<b>40,5</b>	<b>1056</b>	<b>41 <sup>5</sup>/<sub>8</sub></b>

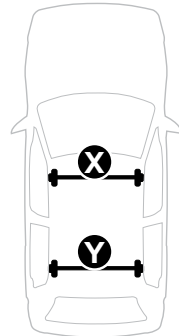
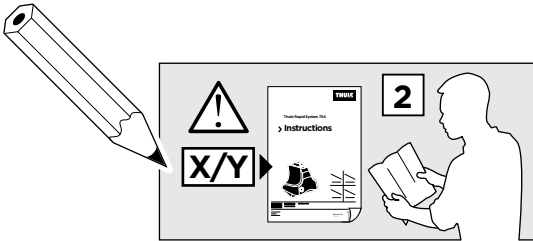


	Y (scale)	Y (mm)	Y (inch)
<b>VOLVO C30</b> , 3-dr Coupé, 07-13 / *08-13	<b>25</b>	<b>901</b>	<b>35 <sup>1</sup>/<sub>2</sub></b>

**2**

**VOLVO C30, 3-dr Coupé, 07-13 / \*08-13**

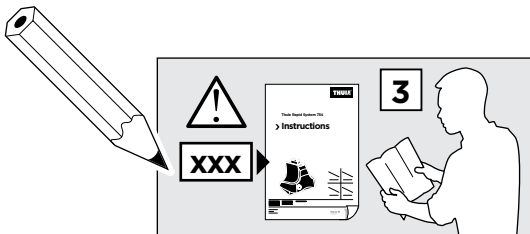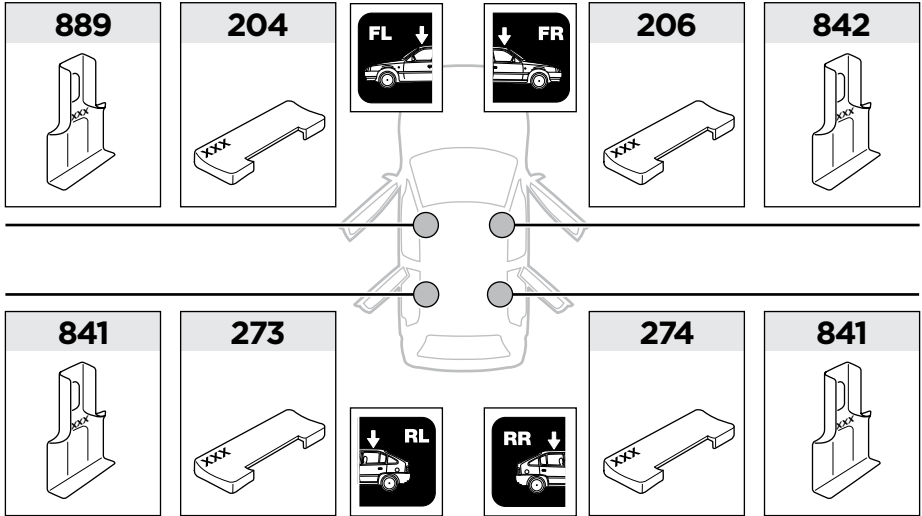

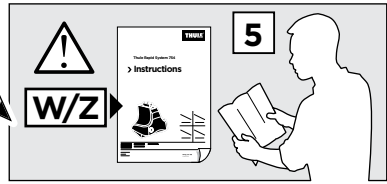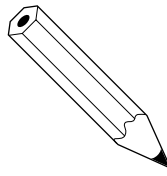**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLVO C30, 3-dr Coupé, 07-13 / *08-13</b>	<b>220</b>	<b>770</b>	<b>8 <sup>5</sup>/<sub>8</sub></b>	<b>30 <sup>3</sup>/<sub>8</sub></b>

